

# MultiRIP

## APPLICATION PRINTING

### **Photographic Printing** (📺 [Video Available](#))

MultiRIP is profiled to allow you to print high quality photographic prints as well as full-color proofs.


#### Step-by-Step Instructions

1. Open your photograph in the appropriate program. For example, we are going to use Adobe PhotoShop® for printing a photograph. Go to File Menu and down to Print.




2. Select the MultiRIP Stylus Pro 4800 printer.

# MultiRIP

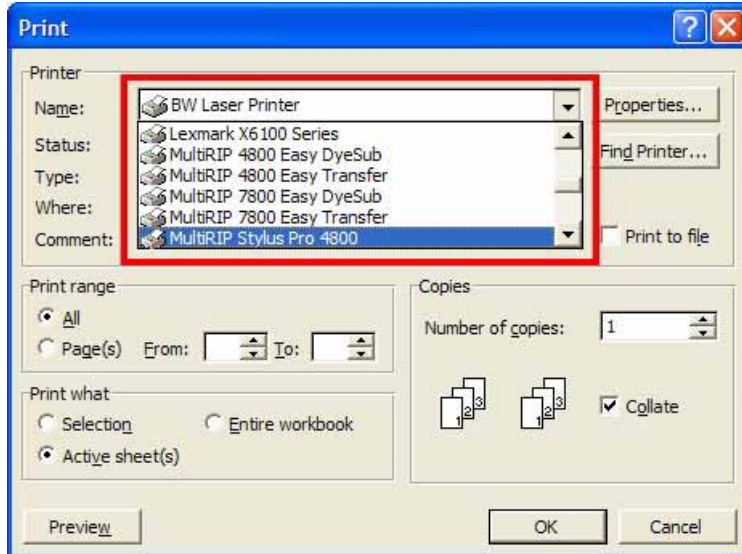


3. Click on the Advance Tab in the bottom left corner of the window.

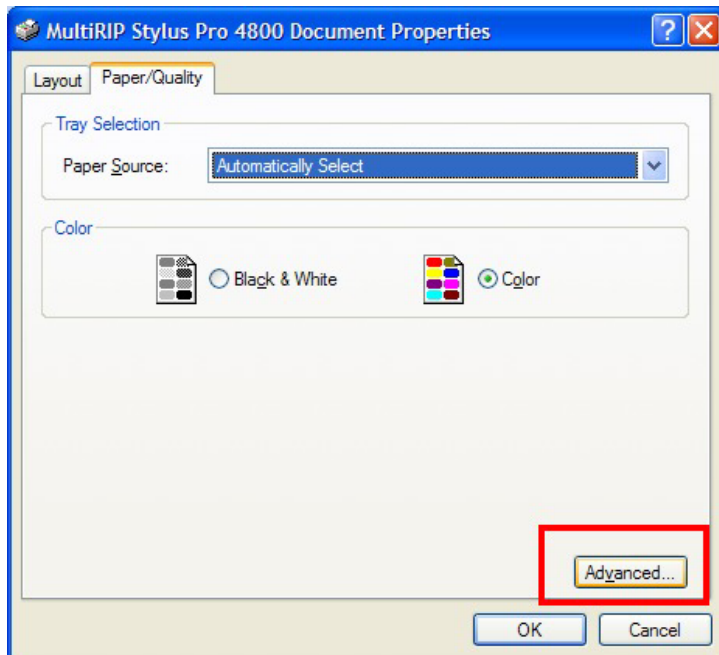

4. In the Advanced Options screen, you will need to set the following fields:  
Paper Size – Based on the size of the paper in your printer  
Print Quality – Most photo papers print best using the Enhanced setting  
Ink Type – Should be set to MultiINK.  
Media Type – Should be set to Photo Paper.

For up-to-date information, please visit the online User Forum at [www.multipusers.com](http://www.multipusers.com).


# MultiRIP

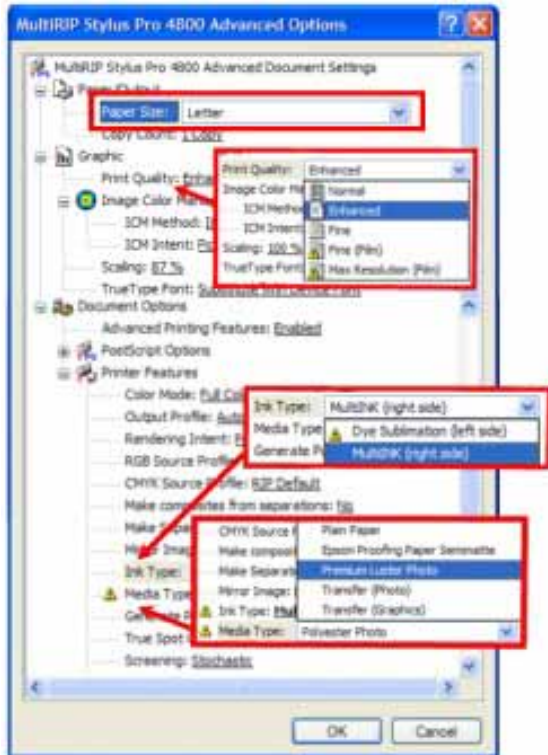

## Roll Media Step-by-Step Instructions

When printing from a roll of sublimation paper, you should do the following additional steps to set up your printer to accept roll feed.


1. After selecting the MultiRIP Stylus Pro X800 printer and clicking Properties, you will need to change the Paper Source to "Roll Paper".

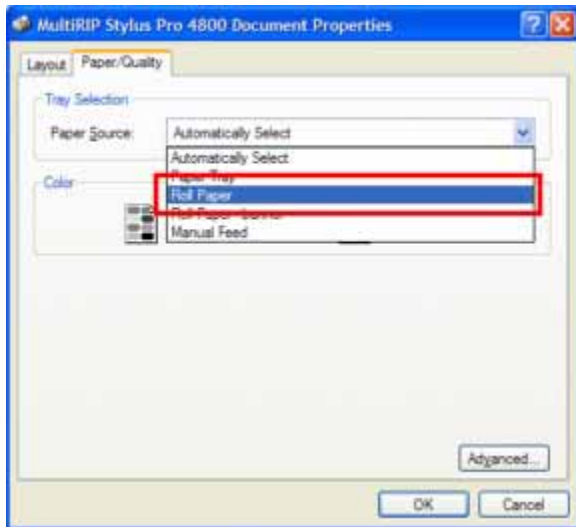


For up-to-date information, please visit the online User Forum at [www.multiripusers.com](http://www.multiripusers.com).

# MultiRIP

2. Then click on the Advanced button. For the Paper Size, you will want to select PostScript Custom Page Size.

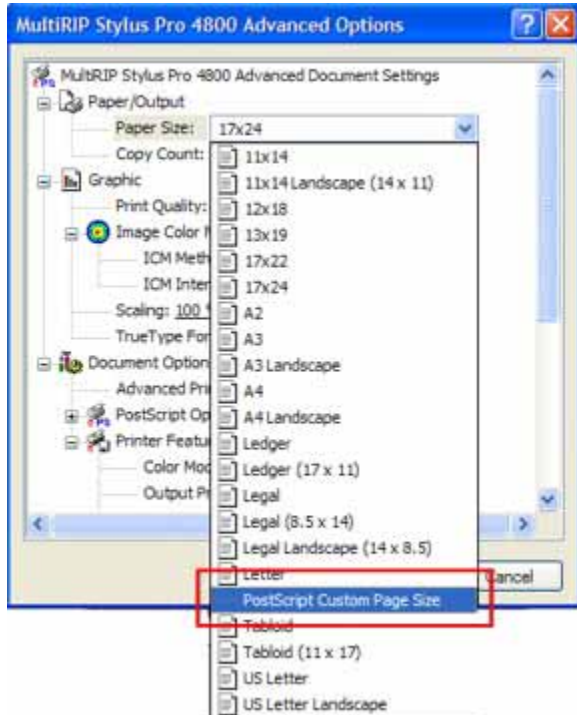


3. A new window will open up for you will put the width of the paper roll you are using and the height of the document.

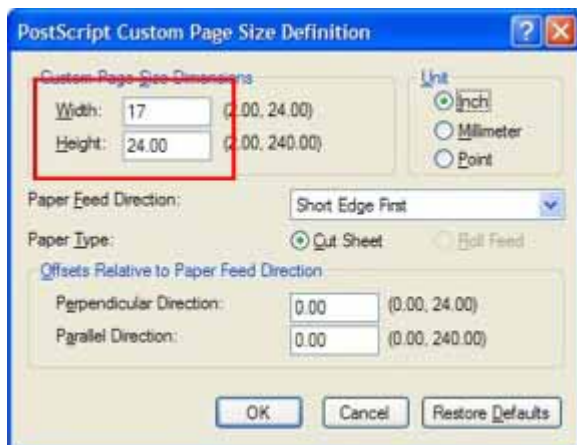


4. For the Paper Feed Direction selection, you will need to choose from “Short Edge First” or “Long Edge First”. You will choose “Short Edge First” when the width of your page size is smaller than the height.

# MultiRIP

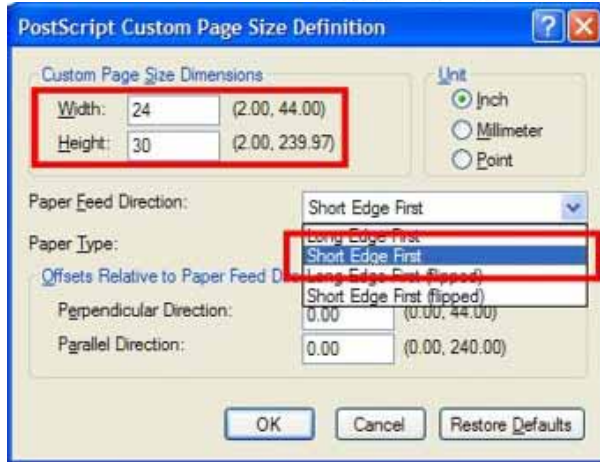

You will choose “Long Edge First” when the width of your page size is larger than the height.

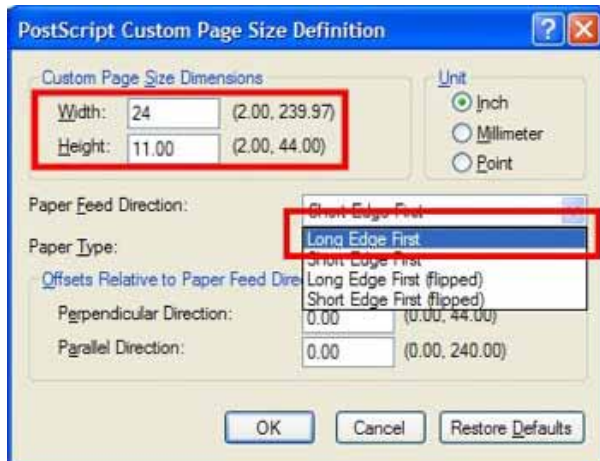

NOTE: When using the Roll Paper function on the Epson 4800 and 7800 printers, the printer will automatically cut the paper to the height of your document unless you turn the cutting function off. See your Epson Printer Manual for how to do this.