


MultiRIP

How to Add Your Own Profiles into MultiRIP

Below are the steps for adding in your own profiles into MultiRIP.


1. Turn off all other applications. If there are any applications that you can print from, it will prevent the changes below from being seen.
2. You will need to drop your new ICC profile into the Color folder as listed below:
 - Go to your C:\ Drive --> WINDOWS folder --> System 32 folder --> Spool folder --> Drivers folder --> Color Folder

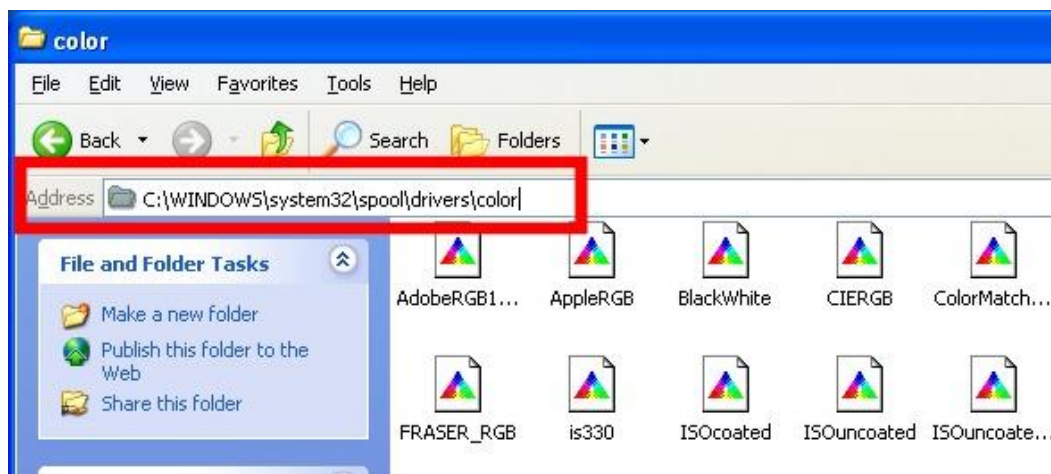

Thus, the path should be - C:\WINDOWS\system32\spool\drivers\color

3. Click on the Start Button of your computer --> Find the MultiRIP Program --> click on the link for "Add Output Profiles to PPDs". The widow that opens up is how we will match the profile with the appropriate PPD.
 - Step A: Make sure you select the CMYK profiles in the drop-down box at the top left of the window.
 - Step B: Scroll through the left-side box till you find your new profile and highlight it.
 - Step C: On the right-side box, choose the MultiRIP Stylus Pro x800 printer based on which printer you have.
 - Step D: Make sure that you choose the CMYK Source Selection in the center of the page.
 - Step E: Then click the Add button at the top.

A. Choose CMYK Profiles

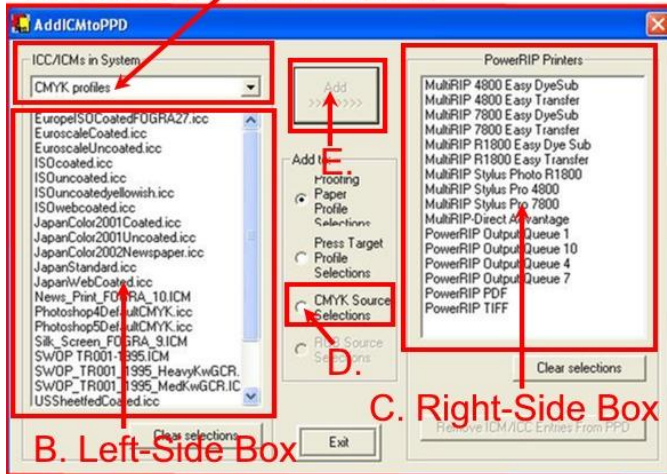

You may want to restart your computer to make sure all the changes are saved.

Please note: That the profiles you add need to be 4-color (CMYK) profiles for your printer model. A standard 8-color profile may not give you the results you are looking for.