


Validating MultiRIP GP – Removing the Watermark

MultiRIP GP's copy protection is a security-key based system which is validated by the user by obtaining an "unlock code" or "activation code" from the iProof web server using the supplied "product code". The validation is installed on the server externally of the MultiRIP GP software. This means that, once validated, you can un-install and re-install MultiRIP GP as many times as you want on the same server without having to re-validate. If you wish to move MultiRIP GP to a different server system, you can remove the validation, log on to the iProof validation server to perform the validation removal procedure, then re-install MultiRIP GP on a different server and validate again.

To validate MultiRIP GP and get rid of the "PowerRIP" watermark, you must purchase the software. Once you have purchased it you will receive a "Product Code" which you will use to obtain a Validation Code from iProof Systems' website.

1. Open "Validate Software" from the "Configure" menu option.

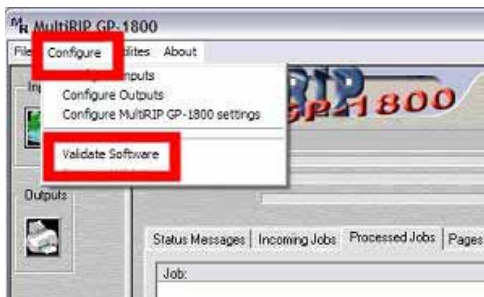

This will open the MultiRIP GP Server validation dialog box



2. Write down the user code (you'll need it for the next step) and leave this window open.
3. Next, log on to www.iproofsystems.com/validation using your favorite web browser. Select the language you want the Registration screen to be displayed in.

Please visit www.AnajetUsers.com for more technical support on MultiRIP GP.

Updated 11/01/03



4. Complete the entire Registration Form and double check it for accuracy. Enter your product code (the 16-character code either on the CD or the CD case) in the box marked “Please enter your product code”.



NOTE: The email address you include on this form will be the email address that your log-in information for MultiRIP GP’s User Forum will be sent to.

5. Then click on the “Validate” link in the box for MultiRIP GP.



Please visit www.AnajetUsers.com for more technical support on MultiRIP GP.

Updated 11/01/03

6. The validation page will appear and you will need to enter your Product Code (16 digits code that came with your software) and you User Code (6 – 9 digit code that shows up in Step #2).

MultiRIP GP-1800

To validate MultiRIP GP-1800, please follow these 3 steps.

1. From the MultiRIP GP-1800 program click on **Configure** then click on **Validate**. At this point, you will be presented with a User Code and prompted for an Activation Code. To get the Activation Code do step 2.
2. Enter your **Product Code** enclosed in your software and **User Code** from the MultiRIP program into the fields below. You will be presented with an **Activation Code**.
3. This Activation Code should then be entered into the Activation Code field of the MultiRIP program.

ALL codes are CASE sensitive.

Please enter your Product Code:

Please enter your User Code:

Do not click "submit" more than one time.

[Return to Validation page](#)

7. If the numbers were entered correctly, the next page will supply you with a validation code. You will need to go back to the MultiRIP GP Interface and enter the Activation Code in the appropriate field.

Product Code - XXXXXXXXXXXXXXXXXXXX

User Code - XXXXXX

Removal Code - Not Available

Activation Code - XXXXXXXXXX

Maximum number of installations allowed - 3

Remaining number of installations left- 2

8. Enter the Validation Code (Activation Code) into MultiRIP GP's validation box.



The screenshot shows a dialog box titled "MultiRIP GP-1800 Validation". It contains the following text: "Please go to http://www.poolsystems.com/validation to retrieve your activation code". Below this, there are two input fields: "User Code:" with the value "091162" and "Activation Code:" which is empty. A red box highlights the "Activation Code:" field. At the bottom, there are "Cancel" and "OK" buttons.

9. Click OK. A dialog will appear informing you that MultiRIP GP is now validated.

10. Close MultiRIP GP's Interface. The validation will not take effect until MultiRIP GP is re-launched.

Please visit www.AnajetUsers.com for more technical support on MultiRIP GP.

Updated 11/01/03